



FOUNDATION FOR EMBEDDED POLE


1+2

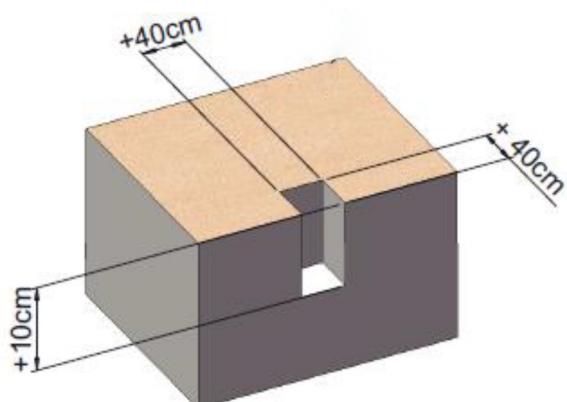


3

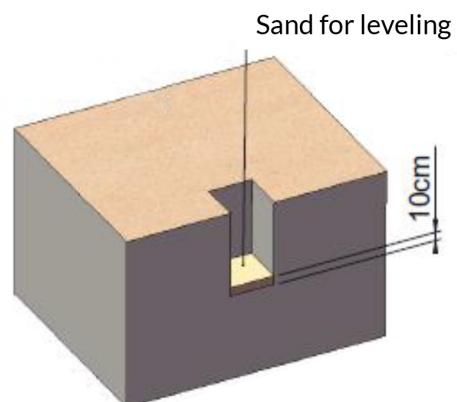

4-5

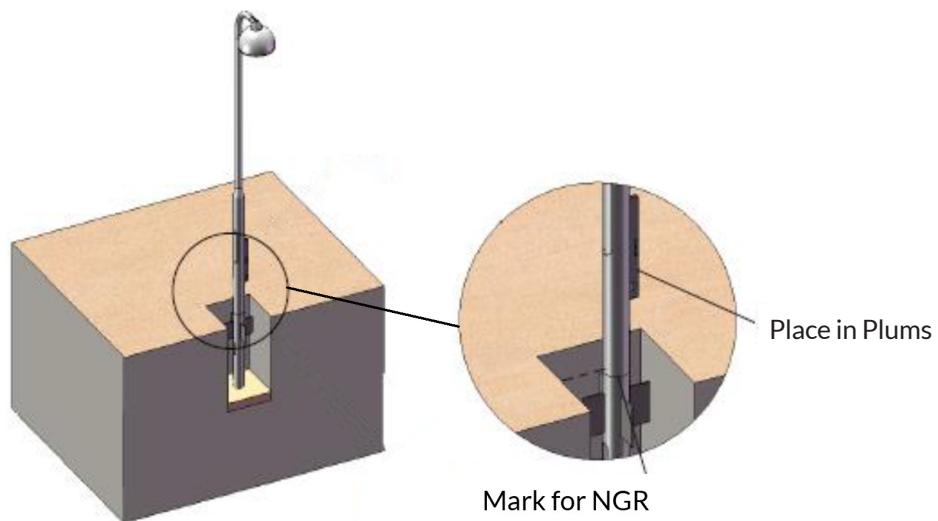

6

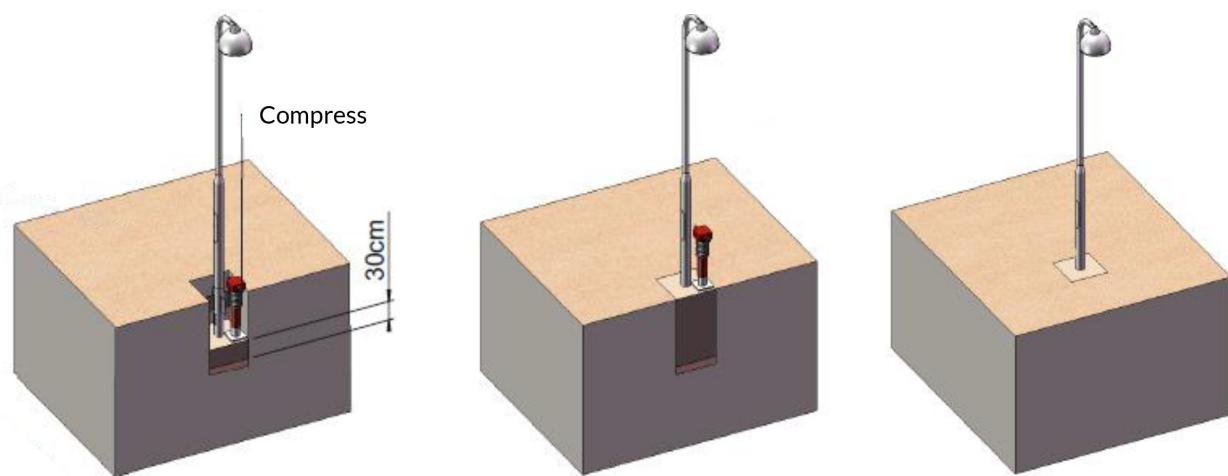

FOUNDATION FOR EMBEDDED POLE

1. First release the area around the selected location for mud, tiles or other things.
Mark the desired location for the embedded Pole as the center of the hole.

Then excavate the hole for the embedded Pole at least 40cm larger than the cross section of the pole.

(eg Pole D = 11.4cm cause a hole of about 52x52cm.)

The hole should be 10cm deeper than the height of the embedded Pole to make room for a well-graded sanding material.

(eg burying depth = 100cm cause a depth of 110cm.)

2. Add the finishing alignment layer and even it out.
3. Place the embedded Pole in the center of the hole on the alignment layer, which is vertically aligned afterwards.

Make sure the burial mark "NGR" flushes the surface level.

Important! In order to provide a correct and stable foundation, the NGR mark on the burial pole must be placed at terrain level.

4. If necessary, pull cables through the cable hole for light connection in the pole.
5. Then fill the hole with base course, which is compressed per 30 cm

"Ensured the burying pole is vertically aligned, after the compression"

The pole excavation is completed, after the last compression.



DAV NORDIC A/S
Tietgensvej 12
DK-8600 Silkeborg

DAV NORDIC A/S
Pilebækvej 5
DK-4632 Bjæverskov

DAV NORDIC A/S
Askelundvej 2E
DK-3600 Frederikssund

T: +45 8682 2900
info@davnordic.dk
www.davnordic.dk